



700TSH / 700YH INSTALLATION MANUAL

2 | Table of Contents

Features	03
Specifications	04
Quick - Start	05
Remote Control	07
Hardware Installation	10
700TSH / 700YH Models	
Additional Info	14
Owner's Record	15

3 | Features

Model Comparison Chart

	700YH	700TSH
VGA (D-SUB 15Pin) Input	1	1
VIDEO (RCA) Inputs	2	2
AUDIO (RCA) Inputs	3	3
PC AUDIO (DC 3.5mm) Input	1	1
Built - In Speaker	●	●
High Quality Scaling	●	●
High Quality Anti - Aliasing	●	●
Auto Power On	●	●
Touch Screen	○	●
HDMI Input (with sound)	●	●

●Standard

○Not Available

Features

- For In-Car Computing, PC, Server, GPS, POS, and various VGA /HDMI Use
- High Bright LCD Panel with LED Backlight
- 5-wire Resistive Touch Screen (USB)
- Multi - Monitor Touchscreen Support
- VGA Input (D-SUB 15-Pin) x 1
- Video Input x 2
- Audio Input x 3
- HDMI input with sound x 1
- Built-in Speaker
- NTSC / PAL Multi-System
- 16:9 Aspect Ratio
- High Resolution Display
- Supports HDMI version 1.1 ~ 1.3
- Adjustable backlight level for night-time use
- Realtek High Performance Image and Video Signal Processor
- AISS - Advanced Image-Scaling and Shaping
- Factory Mode to disable front button(s)
- Factory Mode to disable on screen text
- Last Input memory
- Last Power setting memory
- IR Remote Control
- Auto power-on upon signal detection
- Automatic display adjustment
- On Screen Display Control
- Mirror Image Flip
- Vertical Image Flip
- CCD Auto Switching for backup camera
- Stand: 360° / Height Adjustment
- 26-Pin heavy-duty connector with connector locking
- Anti Glare Coating
- Supports 10V DC ~ 35V DC
- "E" Mark Certified for Automotive use

4 | Specification

Specifications

Display Specifications

- **Screen Size : Diagonal 7" (16 : 9)**
- **Physical Resolution : 800 (H) x 480 (V)**
- **Pixel Pitch : 0.0025 (H) x 0.0075 (V) (in)**
- **Dot Resolution : 2400 x 480 = 1,152,000 (dots)**
- **Supported Resolution : 640 x 480 ~ 1920 x 1080**
- **Supported Refresh : 60~75Hz**
- **LCD Panel Brightness : 500cd/m²**
- **Contrast Ratio : 400 : 1**
- **Response Time : 10~15ms**
- **Viewing Angle : Vertical : 140° / Horizontal : 140°**
- **Colors : 6-bits (262,144 colors)**

Physical Specifications

- **Video Source Input**
 - **RGB analog male connector (15-Pin D-SUB) x 1**
 - **RCA composite video female connector x 2**
 - **HDMI input connector x 1**
- **Audio Source Input**
 - **RCA audio female connector x 1**
 - **DC 3.5 mini stereo plug x 1**
 - **HDMI audio x 1**
- **Touch Panel (Input / Output)**
 - **USB connector x 1 (700 TSH Only)**
- **Power Source Input**
 - **Single 12V DC_IN (Supports 10V~35V)**
- **External Buttons Input**
 - **OSD buttons for Power / Select / Menu / Increase / Decrease**
 - **Power button for power switch**
- **Dimension (In) : 7.72 (L) x 4.88 (H) x 1.42 (D) In**
- **Weight (lb) : 1.277 lbs**


Electrical Specifications

- **Operating Voltage Range : DC 10V ~ 35V**
- **Power Supply : DC 12V**
- **Power Consumption :**
 - **Suspended Mode < 2W (Max)**
 - **Continuous Mode < 10W (Max)**
- **Audio Input < 150MV**


Other Specifications

- **Operating Temperature : -4°F ~ 158°F**
- **Storage Temperature : -22°F ~ 176°F**
- **FCC, CE, E13, Certification**
- **ROHS Compliant**
- **24 Month Warranty**

5 | Quick - Start

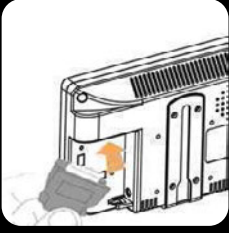


Attach the **26-Pin connector to the monitor**

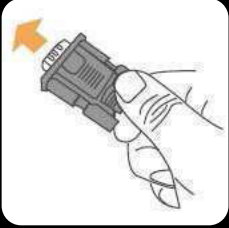


Attach the **D-Sub 15-Pin connector to your computer's analog VGA output connector**




Attach the **HDMI connector to your computer's HDMI output connector.**

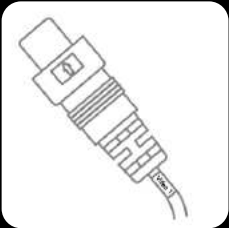


Attach your "**Video source one**"
(e.g. VCR, Video Game Console)
to the **Yellow RCA connector marked Video 1**

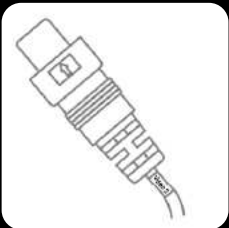

Attach your "**Video source two**"
(e.g. Rear View Camera)
to the **Yellow RCA connector marked CCD**

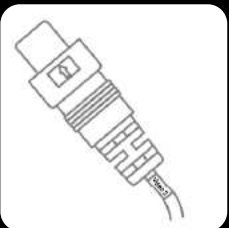

Attach your "**Audio sources**" to the **red RCA connectors marked Audio**. The sound will be outputted through the monitor's internal speaker

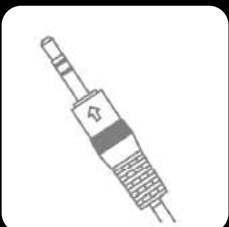

Attach the **mini stereo jack marked " PC Audio "** to your computer's earphone jack

6 | Quick - Start




Touchscreen Installation (700TSH Only)

Please download and install the Touchscreen driver for your operating system from our website WWW.XENARC.COM.




Attach the USB plug to your USB connector

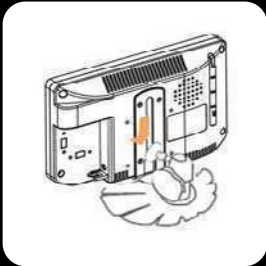


Slide Monitor into optional mounting stand



Secure " Height " position by adjusting knob

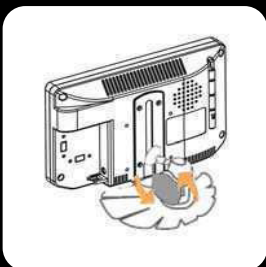


Secure " Tilt " position by adjusting knob

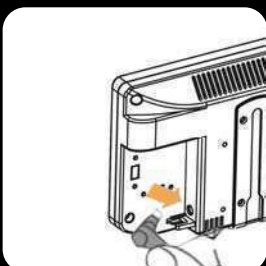

Insert Power Adapter as shown

7 | Remote Control

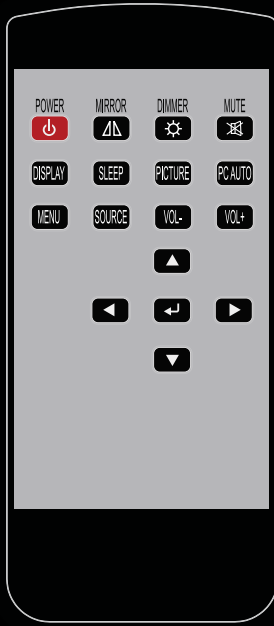

- 1. Power Button :** Turn the monitor ON or OFF.
- 2. Mirror Button :** Enable or Disable the mirroring of the display. Continue to press it and choose the mirroring you want.
- 3. Dimmer Button :** Dim the brightness of the display by pressing this key continuously to set the brightness level of the display. (Only available when auto sensor is disabled.)
- 4. Mute Button :** Mute the speaker. Press again to restore the sound of the speaker.
- 5. Display Button :** Display the current input signal on the screen.
- 6. Sleep Button :** Enable or Disable the sleep timer. Press this button to select and set the time to turn off the monitor automatically.
- 7. Picture Button :** Enable or select the picture mode you prefer. Press this button and then you can select standard, user, bright, or soft.
- 8. PC auto Button :** Enable to adjust the picture automatically, only available in VGA mode.
- 9. Menu Button :** Enable the OSD menu. Press this button again to exit.
- 10. Source Button :** Enable to switch to different source input.
- 11. Vol+ / Vol- Button :** Increase or Decrease the Volume.
- 12. Up / Down Button (▲ / ▼) :** Navigate Up or Down in OSD menu.
- 13. Left / Right Button (◀ / ▶) :** Navigate Left or Right in OSD menu, as well as decreasing or increasing the value of setting in OSD.
- 14. Enter Button :** Confirm the setting or selection.

8 | Remote Control

Instructions for remote controller shortcuts

1. Dimmer (Adjust the brightness)

By pressing the Dimmer button, it will adjust the brightness level from 0, 20, 40, 60, 80 and 100.

Default is 100 (Only available when auto sensor is disabled)



Dimmer: 100

2. Sleep (Set the sleep time out)

Select the time to automatically turn off the monitor.

The minimum is 15 minutes and the maximum is 120 minutes.




60 Min

3. Picture (Set the modes of the picture)

Enable to select the picture modes you prefer.

Press this button and then you can select standard, user, bright, or soft.

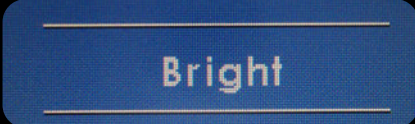

Bright

4. PC AUTO (Auto adjust, only on VGA)

By pressing PC AUTO, it will auto adjust the image.

5. Source (Select the source)


Press this button to select the input signal to display.

If one of these modes is disabled in OSD menu, please setup under (Function → Source Enable)

9 | Remote Control

6. Mirror (Image mirror)

Enable or Disable the mirroring of the display. Continue to press it and choose the mirroring mode you wish to display.

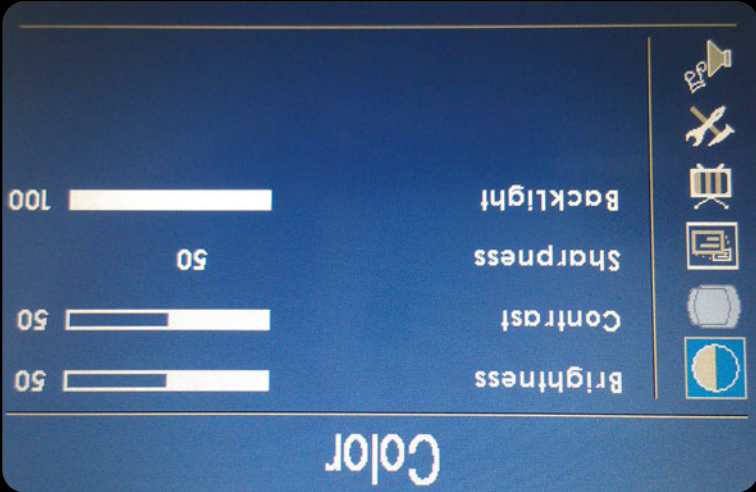


7. Mute

Mute the speaker.
Press again to restore the sound of the speaker.




8. Display (Display mode)

Display the current input signal on the screen.

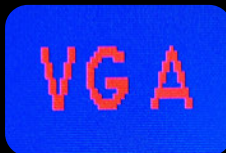



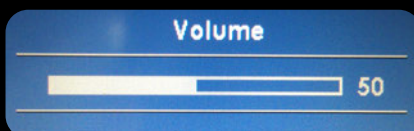


9. VOL- / VOL+

Volume adjustment.



10 | Hardware Installation

Buttons description:

1.  Power Button : Press to turn ON or OFF the monitor.
2.  **Select Button** : Press to select the input signal to display. Press the left (◀) or right (▶) to highlight the input source desired and then press menu button to make the selection.
3.  Menu Button : Press the button to show the OSD menu. And then press the left (◀) or right (▶) to navigate through the menu. Press “ Select ” button to go through a list of settings and options. Press the left (◀) or right (▶) buttons to change the values of settings. Press Menu button again to leave the OSD menu.
4.  **Right Button** : Press this button to increase volume or the value of settings inside the OSD menu.
5.  **Left Button** : Press this button to decrease volume or the value of settings inside the OSD menu.

Ambient Light Sensor Description

Ambient light sensor can be enabled or disabled in the OSD by going into the “ MISC ” category, and selecting the option “ Auto Sensor ”. When Auto Sensor is enabled, the LCD backlight brightness will be adjusted automatically according to the ambient lighting condition.

Note

The brightness cannot be adjusted manually through the dimmer button or through the OSD menu when the Auto Sensor function is enabled.

OSD (On-screen display) Menu

Press MENU to display the OSD on the screen, then press UP / DOWN (or LEFT / RIGHT from the front control panel) to highlight a different category. Press ENTER (or Source) to adjust the selected highlighted category. Under the selected item page, press UP / DOWN (or Source) to select the item from the list, use LEFT / RIGHT to adjust. To select the sub-menu, please press LEFT to enter to the sub-menu.

11 | Hardware Installation


OSD (On-Screen Display) Menu

The Settings and options in the OSD menu are categorized into 6 Categories : Color, Adjust, OSD, Setup, Function, Sound



1. Colors


- **Brightness** : Adjust brightness by pressing Left (◀) or Right (▶) buttons. Increase the number for a higher level of brightness. Decrease the number for a lower level of brightness.
- **Contrast** : Adjust contrast by pressing Left (◀) or Right (▶) buttons. Increase the number for a higher level of contrast. Decrease the number for a lower level of contrast.
- **Sharpness** : Adjust sharpness by pressing left or right buttons. Press left to decrease sharpness and right to increase the level of sharpness.
- **Color Temp** : Set the color temp to the desired setting : 6500K, 9300K and User.
- **Backlight** : Adjust backlight intensity by pressing Left (◀) or Right (▶) buttons. Increase the number for a higher level of backlight output. Decrease the number for a lower level of backlight output. Only works when Auto sensor is turned off.

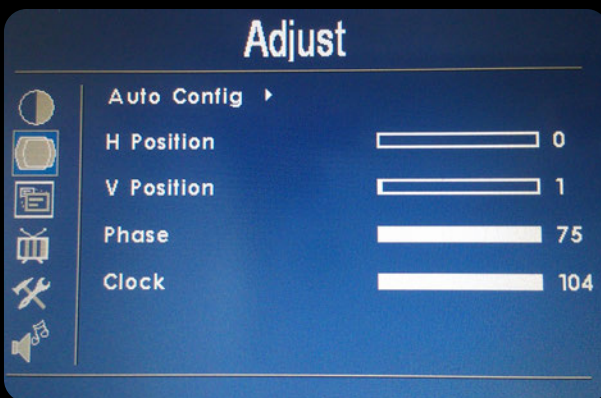

2. Adjust


- **Auto Config** : Adjust display automatically.
- **H Position** : Adjust the Horizontal position by pressing the left or right buttons.
- **V Position** : Adjust the Vertical position by pressing the left or right buttons.
- **Phase** : Phase (fine) adjustment. Image flickering can be removed through changing this setting (only valid for VGA setting)
- **Clock** : Adjust the horizontal sync width of the screen image.

12 | Hardware Installation

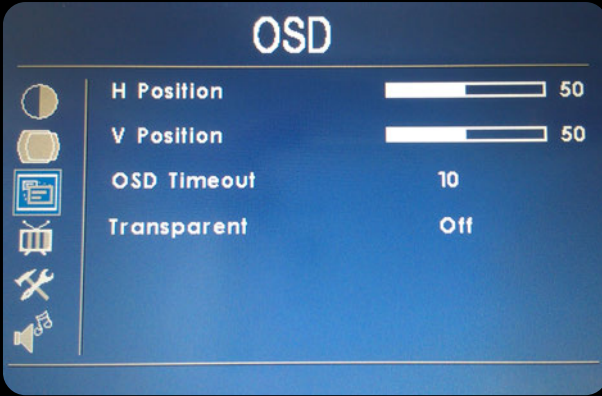

3. OSD

- H Position : Adjust the OSD Horizontal position by pressing the left or right **buttons**.
- V Position : Adjust the OSD Vertical position by pressing the left or right **buttons**.
- OSD Timeout : Adjust the time out of the OSD.
- Transparent : Adjust the transparency of the OSD screen image.

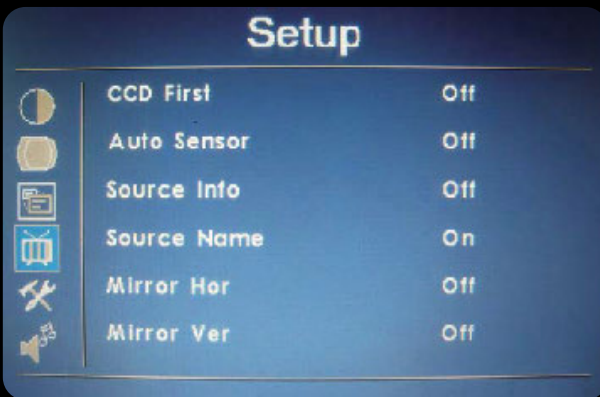

4. Setup


- CCD First : Set whether to have monitor switch to CCD signal automatically if a signal is present. (Default is OFF)
- Auto sensor : **Enable or disable the auto sensor of surrounding environment.**
—“ On ” means the monitor can automatically adjust the brightness of the display according to the surrounding environment.
—**Please note : While auto sensor is enabled, the option of dimmer or backlight inside the OSD can not work until auto sensor is disabled.**
- Source Info : Select to turn OFF or turn ON displaying of On Screen Source Information.
- Source Name : Display the source of input signal. If it is ON, it will display the information on the left corner of the screen when Display button is pressed on remote control. (Default ON)
- Mirror Hor : Adjust the horizontal mirroring position. If it is ON, the image will be on the left and right side. (Default OFF)
- Mirror Ver : Adjust the vertical mirroring position. If it is ON, the image will be on the **upper** and **lower** side. (Default OFF)

13 | Hardware Installation



5. Function

- **Reset** : Reset to Factory default setting.
- **Display Ratio** : Select the display mode to 16:9, 4:3 and Auto.
- **Sleep** : Select the time to automatically turn off the monitor. The minimum is 15 minutes and the maximum is 120 minutes.
- **Keypad** : The function allows you to disable or enable the buttons at the front of the monitor. Power, Menu, Select, Left, and Right buttons can be disabled or enabled.
- **Source Enable** : Select to Enable or disable the input signal. If an input signal is turned off, the source will be disabled.
- **Touch Controller** : Switch the power source for touch control board.

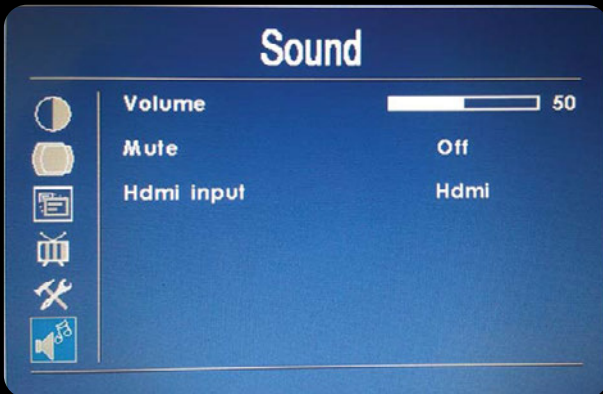

6. Sound

- **Volume** : Adjust the audio volume of built-in speaker.
- **Mute** : Enable or disable muting of built-in speaker.
- **HDMI Input** : Select the audio source while in HDMI input mode. When set to HDMI, the built-in speaker will output the digital audio signal from HDMI. When set to Analog, the built-in speaker will output the analog audio signal from the mini stereo jack marked as “ PC Audio ”
※ The HDMI output option is only available for TSH / YH models

14 | Additional Info

NOTE:

NOTE 1 :

If you are trying to connect the monitor to a laptop computer, please make sure to enable the 15-PIN D-SUB external monitor output located at the back of your laptop computer. Some laptop computers have three modes: Laptop Display Only, Laptop Display plus External Monitor, and External Monitor Only. If this is the case, please switch to the External Monitor Only mode.

NOTE 2 :

Touch Screen device driver must be installed onto your computer in order for the Touch Screen to become operational. Touch Screen driver and software for different operating systems can be downloaded from our website at WWW.XENARC.COM.

NOTE 3 :

The maximum voltage supported by the monitor is 35V DC. Feeding the monitor with higher voltage will damage the monitor and void the warranty. Please use a fused power source if you decide to wire the monitor directly to your car's electrical system. It is also crucial that you check the polarity on the connection.

NOTE 4 :

If the monitor is not displaying the VGA signal properly, the VGA signal might be out of range. Please try changing your display refresh rate to 60, 70, 72, or 75 Hertz.

NOTE 5 :

Please note that the LCD screen is made with high-precision technology. However black points or bright points of light (red, blue, or green) may appear constantly on the LCD screen, and irregular colored stripes or brightness may appear on the LCD screen. This is not malfunction. (Effective dots : more the 99.999%)


For Technical Support , Please contact us at:

Xenarc Technologies Corp.

Toll Free : 888 - 656 - 6536

E - Mail : support@xenarc.com

Website : www.xenarc.com

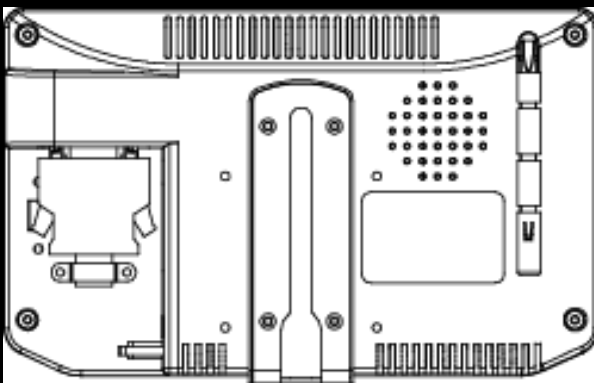

The length of the mounting screw. [M3 x 5 mm (max)]
(common between right side and left side)

15 | Owner's Record

Owner's Record

The model and serial number are located on the rear of the unit. Please record these numbers in the spaces provided below, as well as the dealer name, address, and telephone number. Please refer to these records whenever speaking to your dealer regarding this product.

Model Number : _____

Serial Number : _____

Dealer Name : _____

Street Address : _____

City : _____

State : _____

Zip : _____

Phone Number : _____

Purchase Date : _____